



**Note:** Surface Temp is the surface temperature of a steel plate placed at the distances shown. Air Temp represents the reading of the probe sensing the air at the distances shown.